 


Umbra Legacy

User Quick Guide v1.0

Brought to you by www.UmbrellaMeshNetwork.com

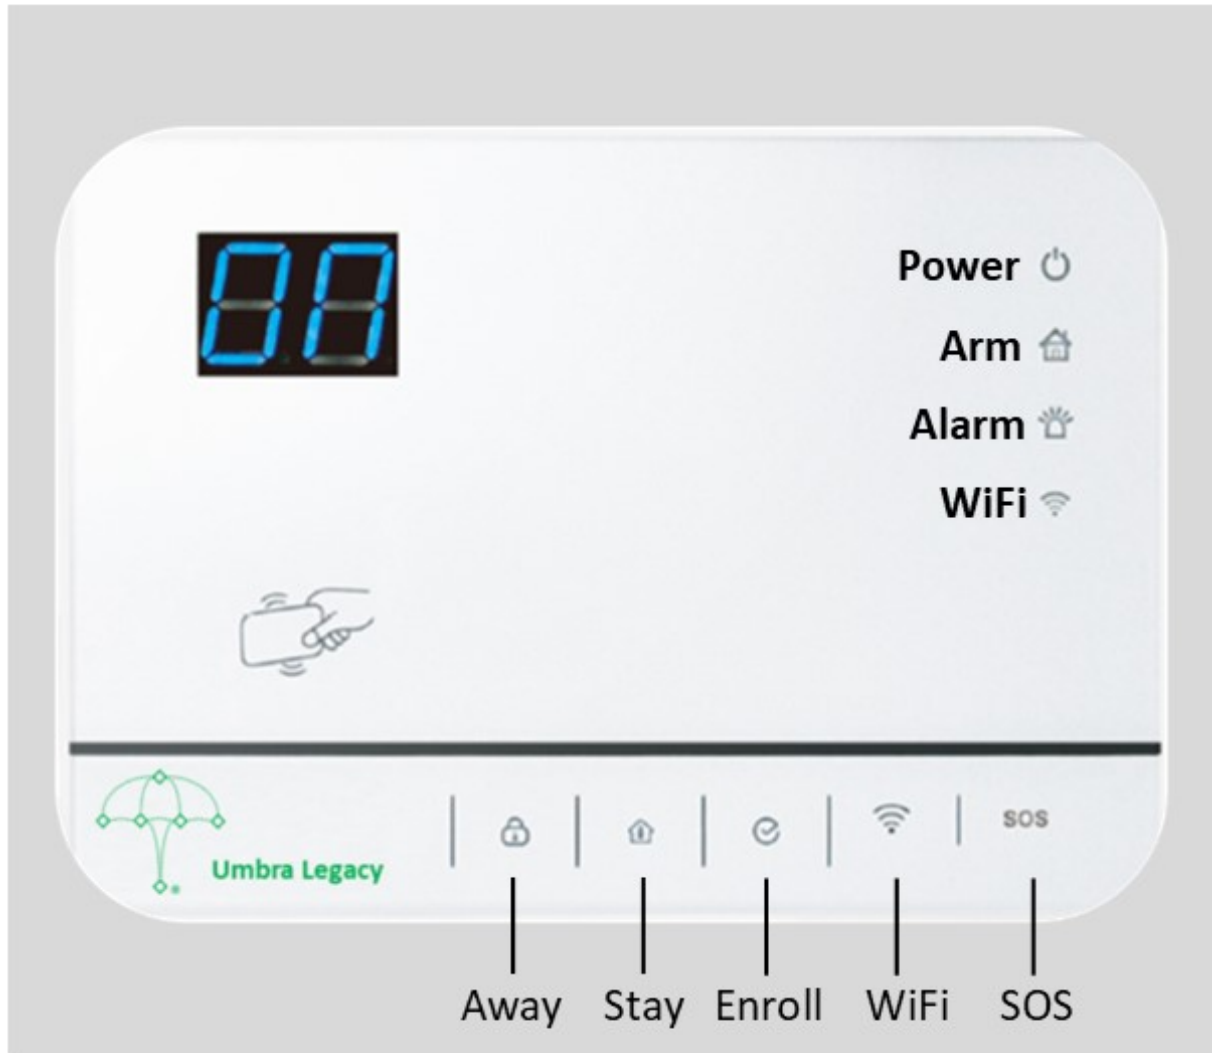

Umbrella Mesh Network, LLC

510 W. Amador Ave., Las Cruces, NM 88005

(855) 602-5276 Ben@UmbrellaMeshNetwork.com

To arm entire system—both interior and perimeter

- Close all windows and doors (the status screen will say “OF” - if any numbers are shown, those sensors will need to be closed)
- **Using App**—Press the Padlock/Home Icon on your App and select “Away Arm” from the menu
- **Using Keyfob**—Press the Locked Padlock on your keyfob
- **Using Keypad**—Press and hold the “AWAY” Padlock for 2 seconds
- **On Umbra Legacy Panel**—Press and hold the “AWAY” Padlock for 2 seconds
- The system will display “ON” and begin exit countdown
- Exit premises before the delay expires

To disarm system when you return

- When you enter through the door, the keypad will emit the entry delay tone
- **Using App**—Press the Padlock/Home icon on your App and select “Disarm” from the menu
- **Using Proximity Card**—Present your proximity tag to the reader area of the panel
- **Using Keyfob**—Press the Unlock Padlock on your keyfob
- **Using Keypad**—Enter your 4 –digit user code followed by the “DISARM” Unlock icon, or present your user proximity tag within the entry delay. (If the keypad is battery only—press and hold the * key for 2 seconds to activate proximity reader)
- If you make an error, press the “*” key and try again.
- The system will display “OF” when disarmed

To arm perimeter of building and still move freely inside

- Close all windows and doors (the status screen will say “OF” - if any numbers are shown, those sensors will need to be closed)
- **Using App**—Press the Padlock/Home Icon on your App and select “Home Arm” from the menu
- **Using Keyfob**—Press the Home Icon on your keyfob
- **Using Keypad**—Press and hold the “HOME” Icon for 2 seconds
- **On Umbra Legacy Panel**—Press and hold the “HOME” icon for 2 seconds
- The system will display “ON” and begin arming countdown

For more information or training, please contact your installer

 
Know your alarm:




App Quick Control

Arm Away
Arm Stay
& Disarm

Keyfob

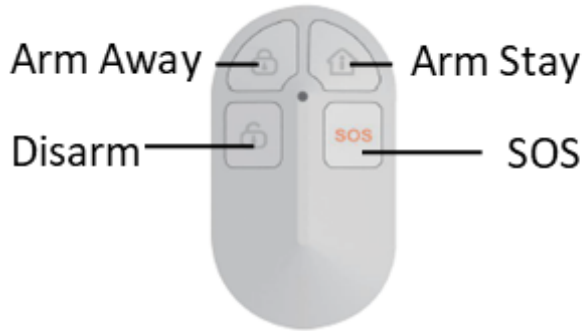

RFID Proximity Tag

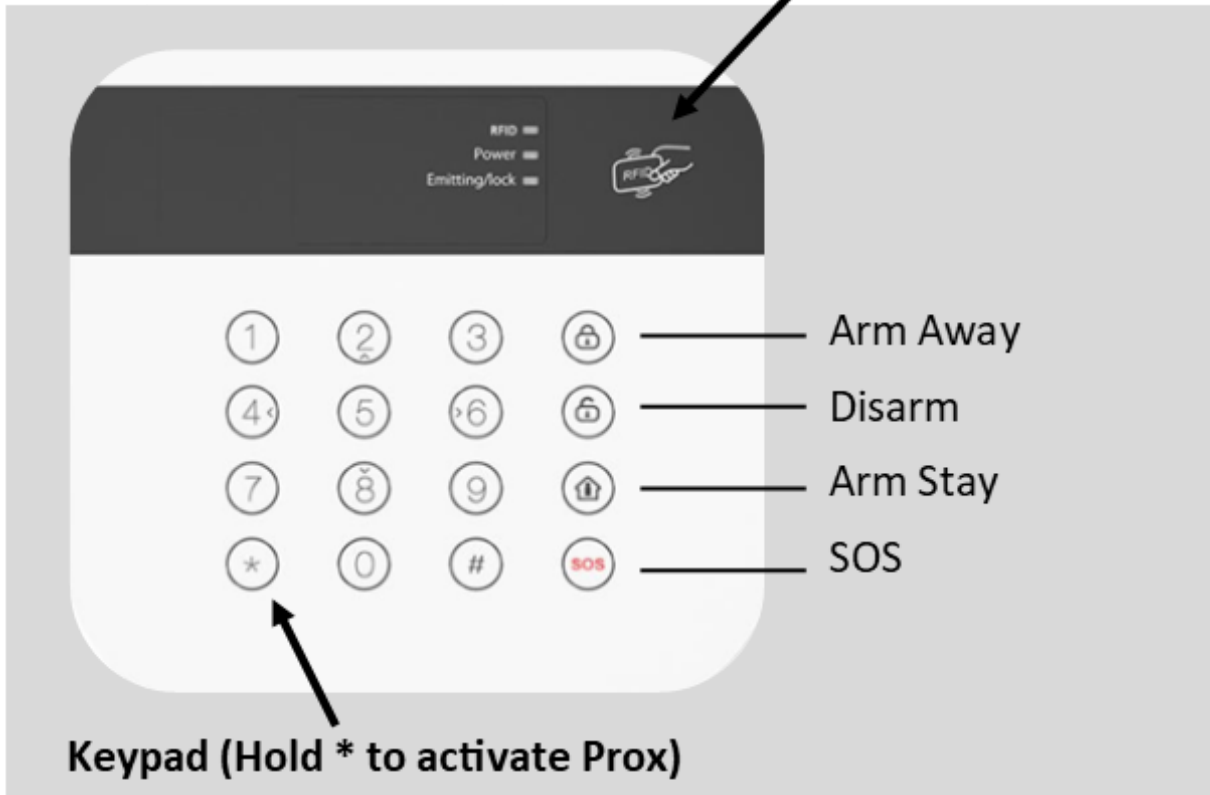 

| | | Circle Applicable | | |
|------|-------------|-------------------|----------|----------|
| Zone | Description | Arm Home | Arm Away | Type |
| 1 | | Yes / No | Yes / No | Wireless |
| 2 | | Yes / No | Yes / No | Wireless |
| 3 | | Yes / No | Yes / No | Wireless |
| 4 | | Yes / No | Yes / No | Wireless |
| 5 | | Yes / No | Yes / No | Wireless |
| 6 | | Yes / No | Yes / No | Wireless |
| 7 | | Yes / No | Yes / No | Wireless |
| 8 | | Yes / No | Yes / No | Wireless |
| 9 | | Yes / No | Yes / No | Wireless |
| 10 | | Yes / No | Yes / No | Wireless |
| 11 | | Yes / No | Yes / No | Wireless |
| 12 | | Yes / No | Yes / No | Wireless |
| 13 | | Yes / No | Yes / No | Wireless |
| 14 | | Yes / No | Yes / No | Wireless |
| 15 | | Yes / No | Yes / No | Wireless |
| 16 | | Yes / No | Yes / No | Wireless |
| 17 | | Yes / No | Yes / No | Wireless |
| 18 | | Yes / No | Yes / No | Wireless |
| 19 | | Yes / No | Yes / No | Wireless |
| 20 | | Yes / No | Yes / No | Wireless |
| 21 | | Yes / No | Yes / No | Wireless |
| 22 | | Yes / No | Yes / No | Wireless |
| 23 | | Yes / No | Yes / No | Wireless |
| 24 | | Yes / No | Yes / No | Wireless |
| 25 | | Yes / No | Yes / No | Wireless |
| 26 | | Yes / No | Yes / No | Wireless |
| 27 | | Yes / No | Yes / No | Wireless |
| 28 | | Yes / No | Yes / No | Wireless |
| 29 | | Yes / No | Yes / No | Wired/WL |
| 30 | | Yes / No | Yes / No | Wired/WL |
| 31 | | Yes / No | Yes / No | Wired/WL |
| 32 | | Yes / No | Yes / No | Wired/WL |